

User Guide Respiration

This user guide has been created to educate and inform the reader about doing respiration measurements

For more information about NeXus, our BioTrace+ software, please visit our website or contact us.

www.mindmedia.com

The copyright of this document remains with Mind Media BV © 2018, and the contents of it may not be altered or copied. However we do permit unlimited distribution by electronics means of this document in the unaltered digital PDF format in which it is supplied. This document is not intended to replace scientific and clinical literature.

Contents

Introduction	3
Required Equipment	4
Respiration measurement setup	5
BioTrace+	6
Appendix 1: Artifacts	
Appendix 2: Care of materials	11

Introduction

This manual provides a step-by-step review of how to do respiration measurements with the NeXus-4, NeXus-10 or NeXus-32. The manual provides information about the required hardware, preparation and measurement steps, artefacts (appendix 1), and care of materials (appendix 2).

Required Equipment

The following is required to perform respiration measurements:

- Nexus-4, NeXus-10 or NeXus-32
- Respiration Sensor
- Elastic Respiration Belt (Small or Large)

Respiration measurement setup

Before the actual measurement can start, the equipment has to be connected. Detailed information on setting up the NeXus can be found in the NeXus User Manual or Quick Start.

Connect the respiration sensor to input D of the NeXus-4, input H of the NeXus-10 or input 31 of the NeXus-32. Make sure the red dot of the connector is facing downward with the NeXus-4 or NeXus-10 or upward with the NeXus-32.




Sensors can be disconnected by pulling the silver ribbed part of the connector backward.



Attach the respiration belt to the respiration sensor.

Place the respiration sensor on the chest (A) or on the abdomen (B), with the central part of the sensor just above the navel. For biofeedback and relaxation training mostly the abdomen position is used.

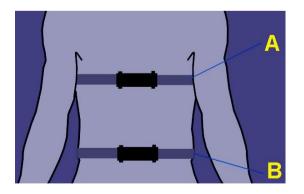

When placing the sensor, make sure it is neither too tight nor too loose. The elastic belt must always remain under some tension. The sensor can be worn over clothing but make sure the belt stretches with inhalation and reverts back with exhalation.


Now go to chapter 'BioTrace+' for further instructions.

BioTrace+

Start the BioTrace+ Software.



Select Signal Library.

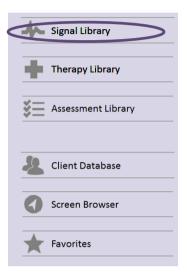

Select respiration.

eeg	J Temperature
Z-Score	Blood Volume Pulse
scp	Respiration

Select your preferred measurement screen (e.g. Resp Basic).

Resp Basic
Resp and BVP Coherence
Resp and Oximetry
Resp multimodal
2x Resp and BVP coherence

Switch the NeXus on.

Click the **recording** button.



The *select a client* dialog box will appear.

Continue	Add New	Cancel

Select a client and click **Continue...** or click **Add New** for adding a new client.

The *New session recording* screen will appear. Click **Start Recording** to start recording a session.

New session recording, make sure your system is switched ON and connected to the computer
System Ready, press START RECORDING to connect.
START RECORDING Cancel

It is possible to show and hide the bar graph feedback on the client screen



Show graph on client screen

Hide graph on client screen

Click the following icon to set the respiration pacer (or go to the top menu and select Configuration > RSP/HRV Pacer Settings).



This will open the Respiratory Pacer Settings screen.

espiratory PACER settings			
	 <i>T2</i>	<u>13</u>	<u>74</u>
Enter the PACER	time settings	below in milliseconds	
T1: Inhale Time:	2500	ms.	+
T2: Sustain Time:	0	ms.	
T3: Exhale Time:	2500	ms.	
T4: Pause Time:	2500	ms.	-
Pacer r	ate in breaths	per minute (BPM): 8.0	
	Bind PAG	CER settings to current scree	en
		uto-step function, the pacer 9.0 BPM in steps of 0.5 BPM	
Auto-step function:	Auto-step	ping is disabled	•
Auto-step size (BPM):	Increase f	rom start->end by 0.5 BPM	•
Start/End Pacer Values:	8.0 BPM	▼ 9.0 BPM	-
OK Save	(dient)	Load (dient)	Cancel

The following parameters can be set (time entered in milliseconds):

- T1 Inhale Time: the time it takes to go from baseline (0) to the maximum (inhale).
- T2 Sustain Time: the time the signal will be sustained (hold) at maximum.
- T3 Exhale Time: the time the signal will drop from maximum to baseline (exhale).
- T4 Pause Time: the 'pause time' in between this and the next cycle.

Based on these parameters, a pacer rate in breaths per minutes (BPM) will be calculated.

Click the + and - button to change the pacer rate while maintaining the same ratios.



Use the + and – keyboard keys during a session in order to speed up or slow down the pacer. Check **Bind pacer settings...** to always have the same setting for the loaded screen.


Bind PACER settings to current screen

A pacer can be set to change over time with a preset start/end and with a pre-set step size.

Automatic Pacer: When you e automatically change its rate			
Auto-step function:	Enabled: step every 1 minute(s)		
Auto-step size (BPM):	Increase from start->end by 0.5 BPM		
Start/End Pacer Values:	7.0 BPM 👻	8.0 BPM -	

Click OK

Feedback Type Controls are shown on the right side of a training screen.

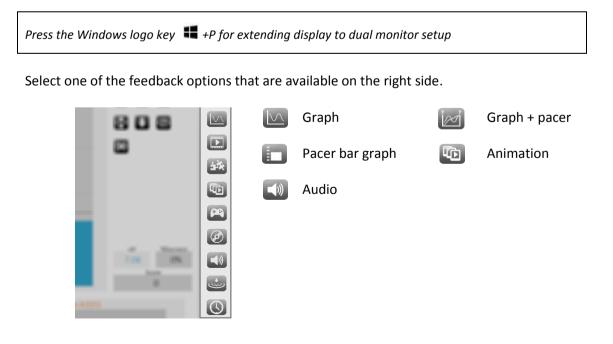

Select other content during a recording by clicking the change feedback icon in the right top corner. This can only be used with videos, animations, games, puzzles, and audio.



Markers can define a certain event during a recording. These markers can be added manually by pressing *the marker symbol* in *Session controls in the left bottom corner* (or by pressing **Enter**):



The following dialog box appears for naming markers.

Please enter the text of the session MARKER
Marker:1

In order to stop the recording, click the **stop** button.



An alert box will appear.

Stop and SAVE this Session: YES or NO? Choose CONTINUE to continue recording.			
Yes Continue No			

Click Yes and save the session and enter a description of the session.

Enter your description line for this session	
My First Session	
OK Cancel	

Confirm by clicking **OK**, the session is now saved.

Appendix 1: Artifacts

• Movement artifacts Be aware that body movements other than breathing lead to artifacts. Usually a sitting position is used

Appendix 2: Care of materials

NeXus Respiration Sensor cleaning

The NeXus Respiration Sensor can only be cleaned. There are no procedures or prescriptions for disinfecting.

The sensor cable can be cleaned with lukewarm water or alcohol prep pads (do not submerge in water or in alcohol solution).

The respiration belt (note: not the respiration sensor itself) can be cleaned with a soapy hand wash, preferably at a low, lukewarm temperature.

Please avoid cleaning the connector, as this may affect its performance.